

Overview

This kit contains 14 pieces of non-combustible stones/wood that may be used to adorn linear fireplaces (3615, 4415, 4415 ST, 6015). There is no requirement for the number of logs used. You may have extra logs/stones – keep these for future use.

Packing List

* 10 Pieces of Wood * 4 Stones



Placing the Logs/Stones


Place the logs/stones in a random manner on top of the crushed glass media.

EXAMPLE: 4415 Fireplace



- **PLACE THE THICK “END-PIECE” AT ONE END OF THE BURNER**


This piece may be too thick for front or back placement. Place as shown below.

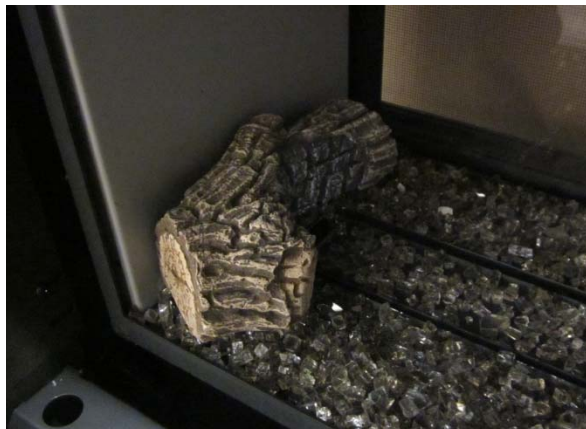

Log / Stone Set – Linear Fireplaces Installation Instructions (SKU 94500967)


- **DO NOT PLACE THE LOGS/STONES DIRECTLY OVER THE PILOT FLAME OPENING**
- **DO NOT STACK MEDIA IN PILES THAT MAY FALL OVER OR BLOCK AIRFLOW.**
- **DO NOT PLACE THE LOGS/STONES DIRECTLY ON THE BURNER.**
- **IF YOU WISH TO PLACE LOGS OVER THE BURNER, MAKE SURE TO PROP THEM UP SO THEY DO NOT DIRECTLY CONTACT BURNER FLAMES OR ARE OVER THE BURNER PORT CLUSTERS (this causes soot).**

The burner has burner port clusters (see picture below). These clusters create tall flames that will lead to soot if logs are placed directly above them.

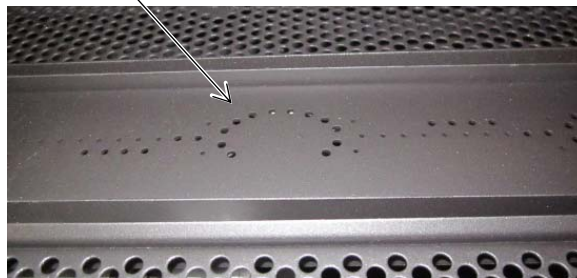

We recommend you place the logs so they are not directly over these clusters (tall flames). This is best done by noting the cluster position prior to crushed glass placement. After the logs are placed, start the fireplace and let it burn for 5 to 10 minutes. Check each log to make sure it does not impinge on the taller flames (see illustration below) – this may take a few attempts to perfect.

Improper Placement

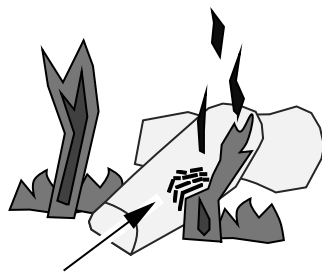

Soot

Correct Placement

